

## User instruction

# Hide status messages on site view

### Description

The systems default settings is to display operating messages. As a user, you can choose to hide these messages.

### Hide status messages function

1. To deactivate status messages, select your personal preferences by clicking your name.



2. Click the "off" button. The button turns green. Then go back to the site view.

Show status messages

